


Blank Screen with Alarm

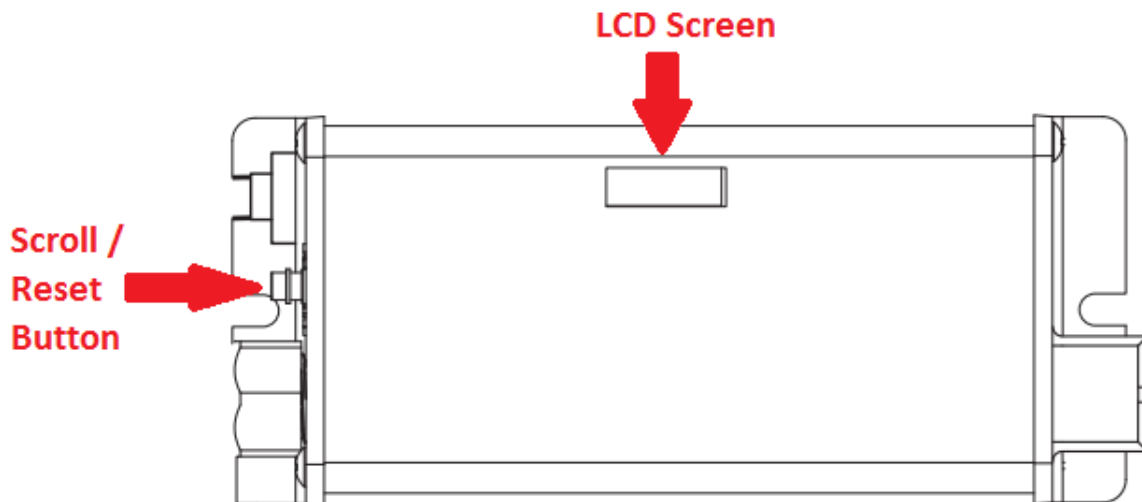

Symptoms:

- LCD screen is blank (no display)
- Audible alarm is going off (beeping one second on, one second off)

Solutions:

1. Check connections to the lamp, typically these symptoms indicate that the lamp is not drawing any current
2. If connections are sound try a new lamp. Lamps have a 1 year warranty from purchase.

Symptoms:

- LCD screen is blank (no display).
- Audible alarm is going off (one long tone).

Solution:

1. Try a new controller. Controller has a 3 year warranty.

Symptom:

- LCD screen is blank (no display).
- Audible alarm is going off (one long tone).

Solution:

1. Make sure the circle base is connected into the lamp plug of the controller. The circle base has 3 pins that plug into the extra 3 slots on the lamp harness. If this is unplugged the lamp will not light, it is a safety switch.